 


Parts Location

1. Headlight Relay (High)
2. Immobilizer Amplifier (Immobilizer Models)
3. Ignition Switch with Immobilizer Antenna (Immobilizer Models)
4. Starter Lockout Switch
5. Fan Motor
6. Starter Relay with Main Fuse 30 A
7. Alternator
8. Speed Sensor
9. Sidestand Switch
10. Gear Position Switch
11. Frame Ground 1
12. Fuse Box 1
13. Turn Signal Relay
14. Relay Box
15. Fuse Box 2 with ECU Fuse 15 A
16. ECU (Electric Control Unit)
17. Headlight Relay (Low)
18. Meter Unit
19. Front Brake Light Switch
20. Air Switching Valve
21. Camshaft Position Sensor
22. Water Temperature Sensor
23. Crankshaft Sensor
24. Frame Ground 2
25. Battery 12 V 14 Ah
26. Engine Ground
27. Starter Motor
28. Rear Brake Light Switch
29. Regulator/Rectifier

Wiring Diagram (United States, Canada, New Zealand and Colombia)




Wiring Diagram (United States, Canada, New Zealand and Colombia)

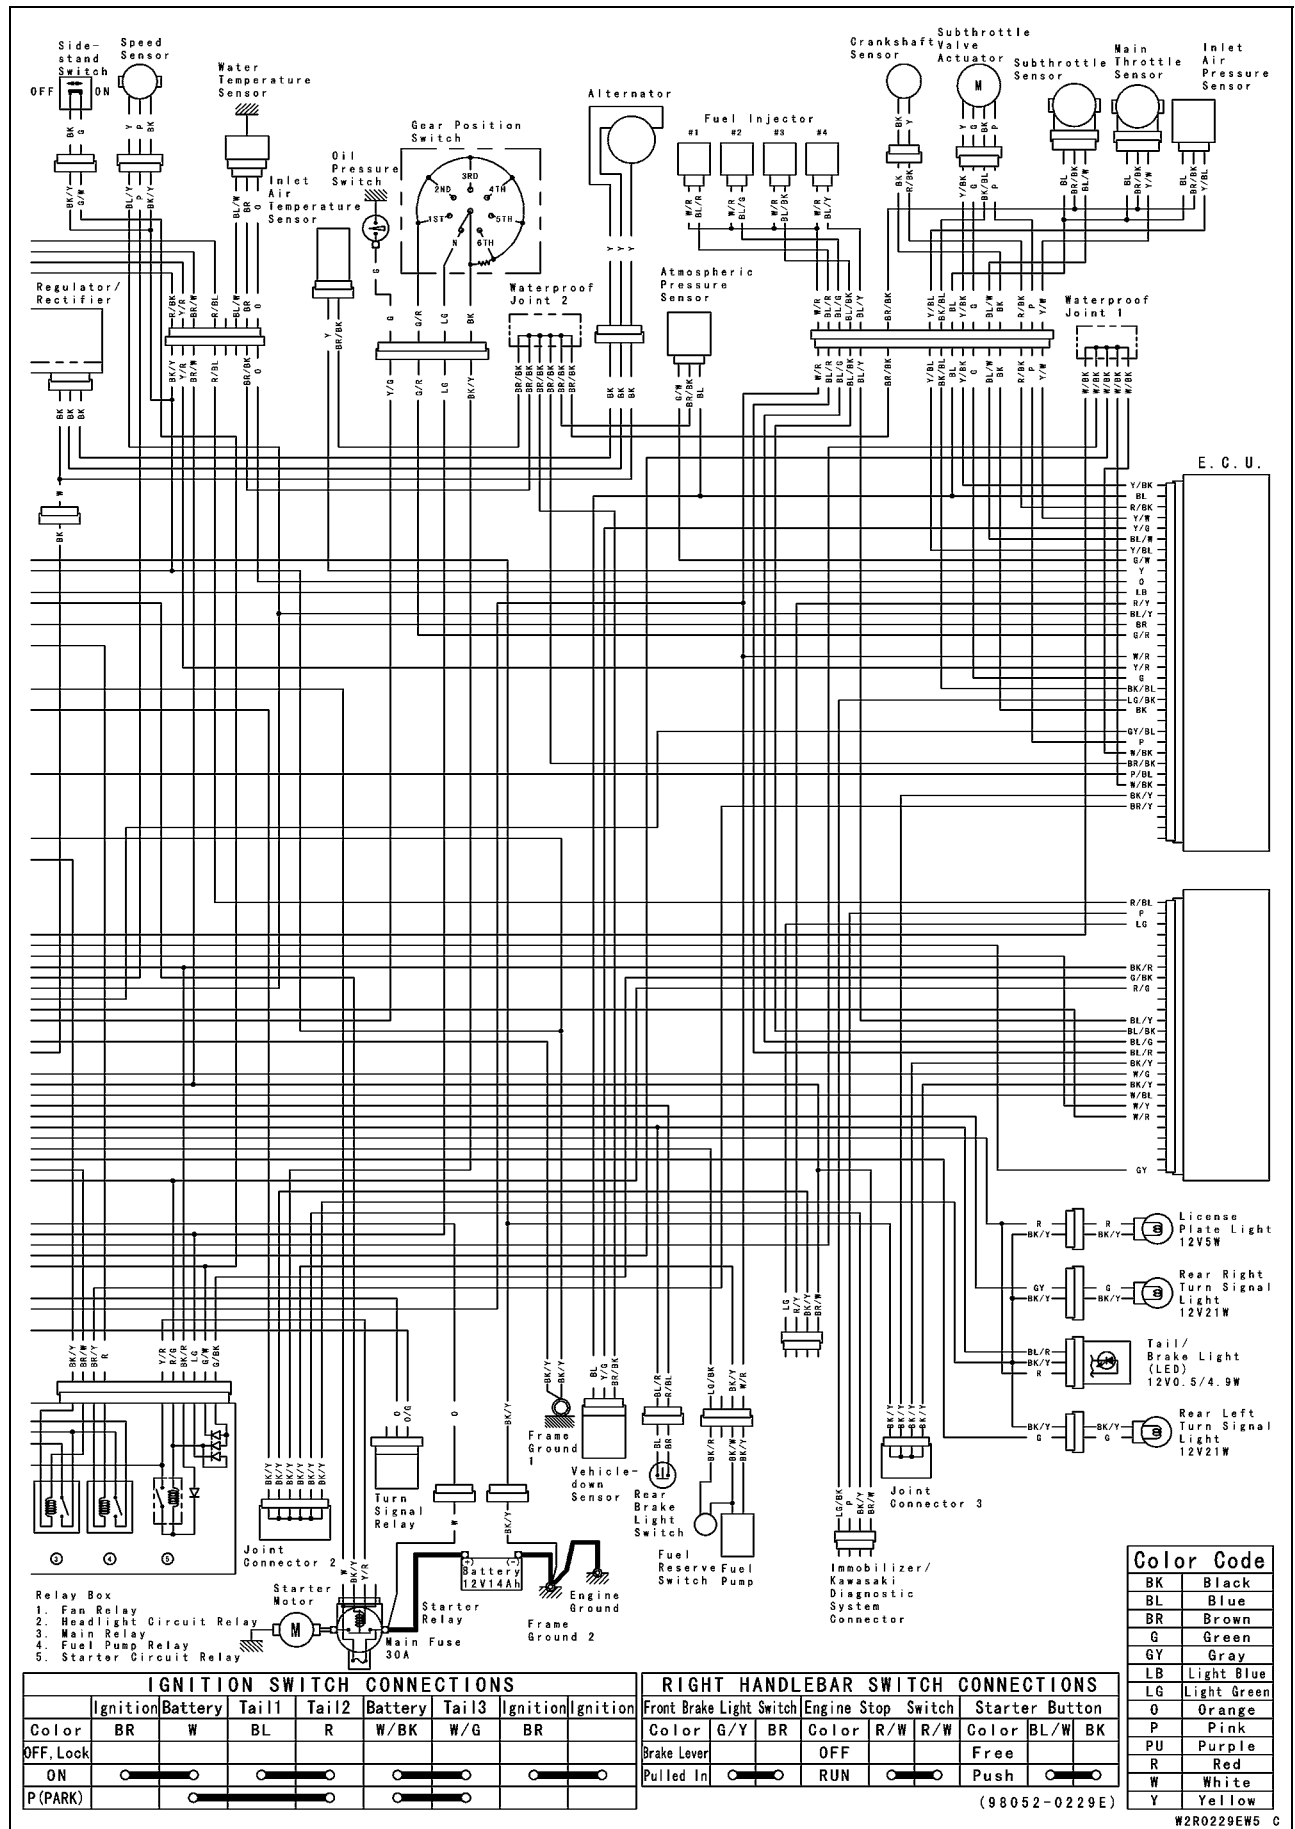


16-14 ELECTRICAL SYSTEM

Wiring Diagram (Other than United States, Canada, New Zealand and Colombia)

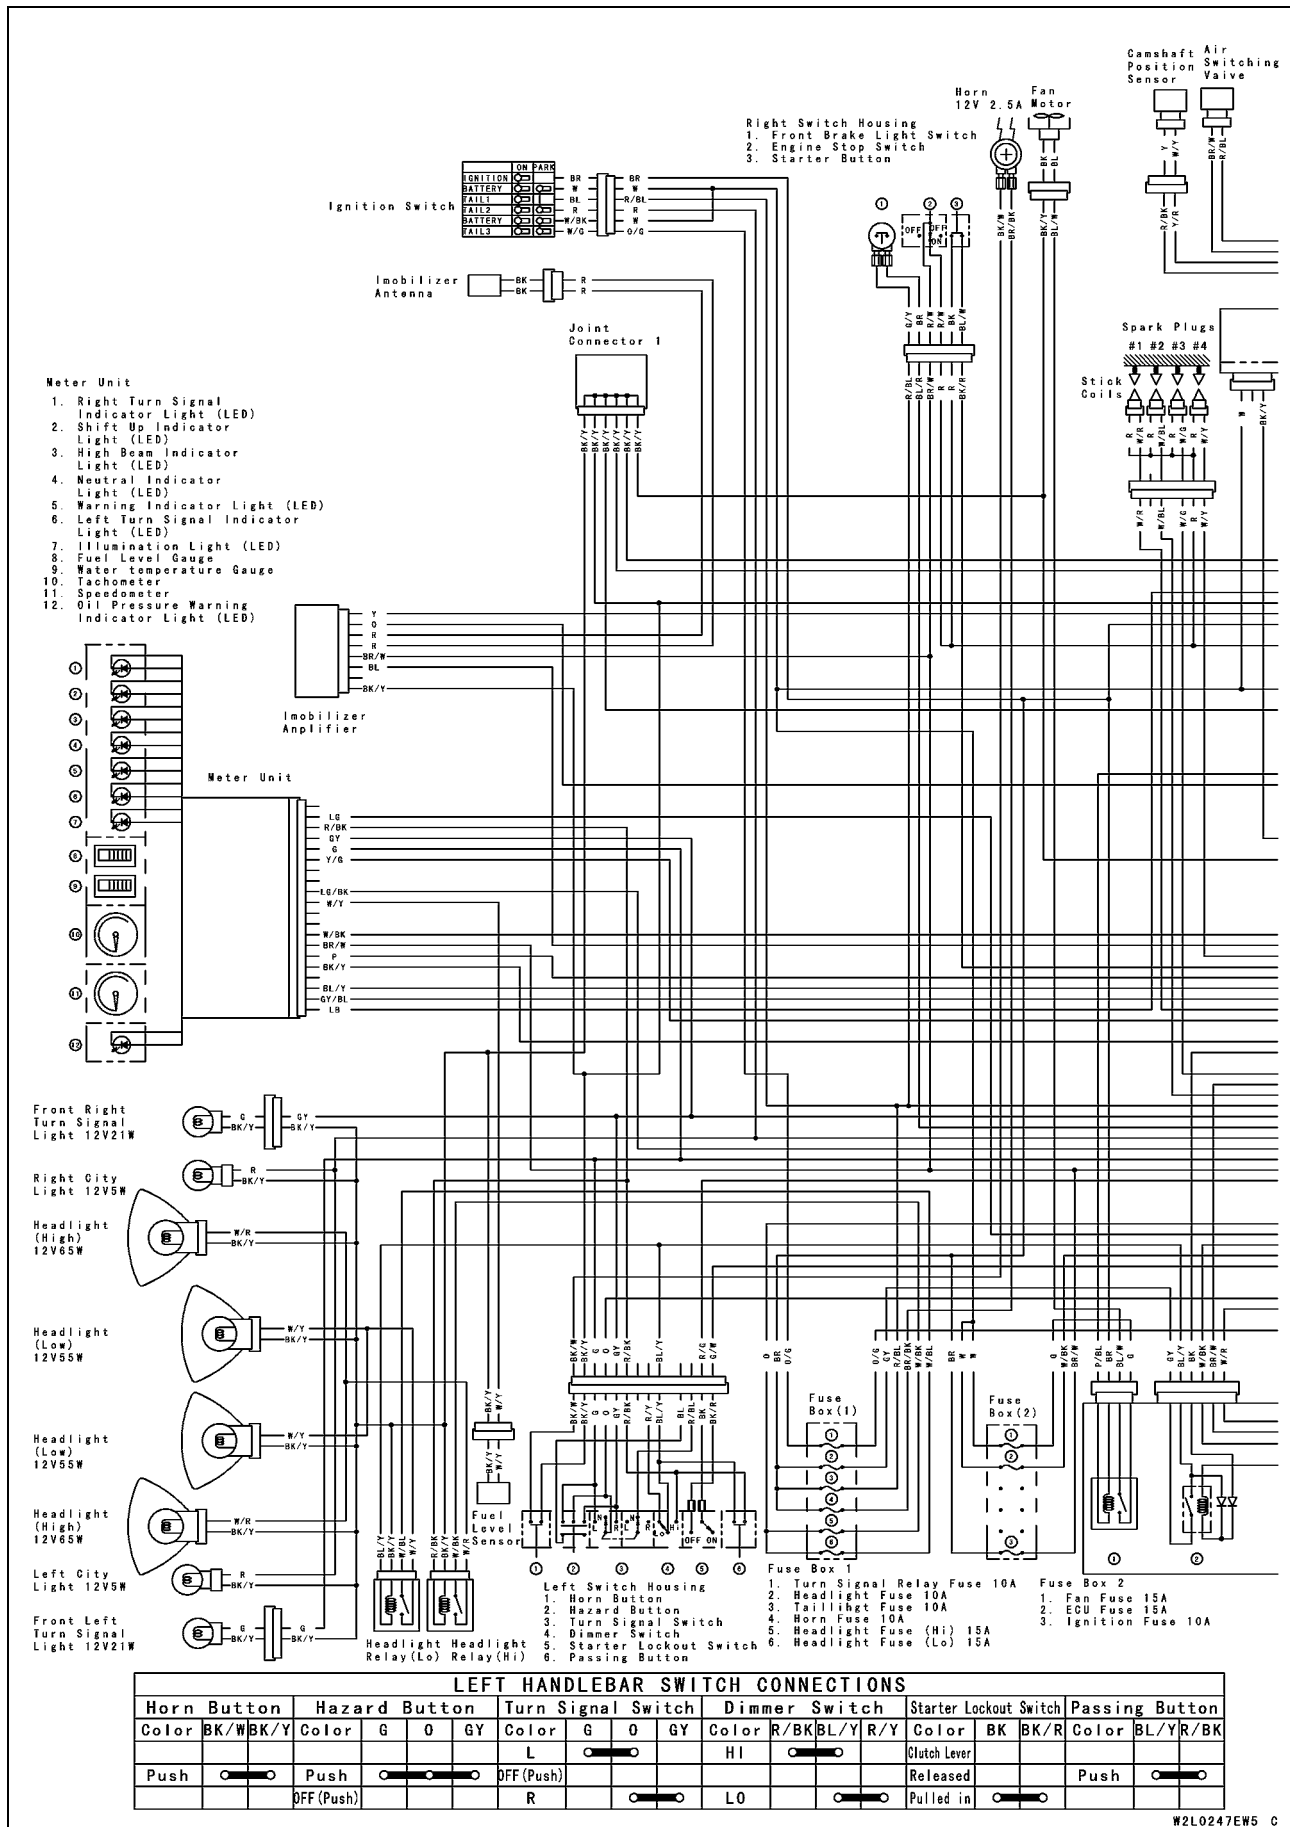


ELECTRICAL SYSTEM 16-15

Wiring Diagram (Other than United States, Canada, New Zealand and Colombia)

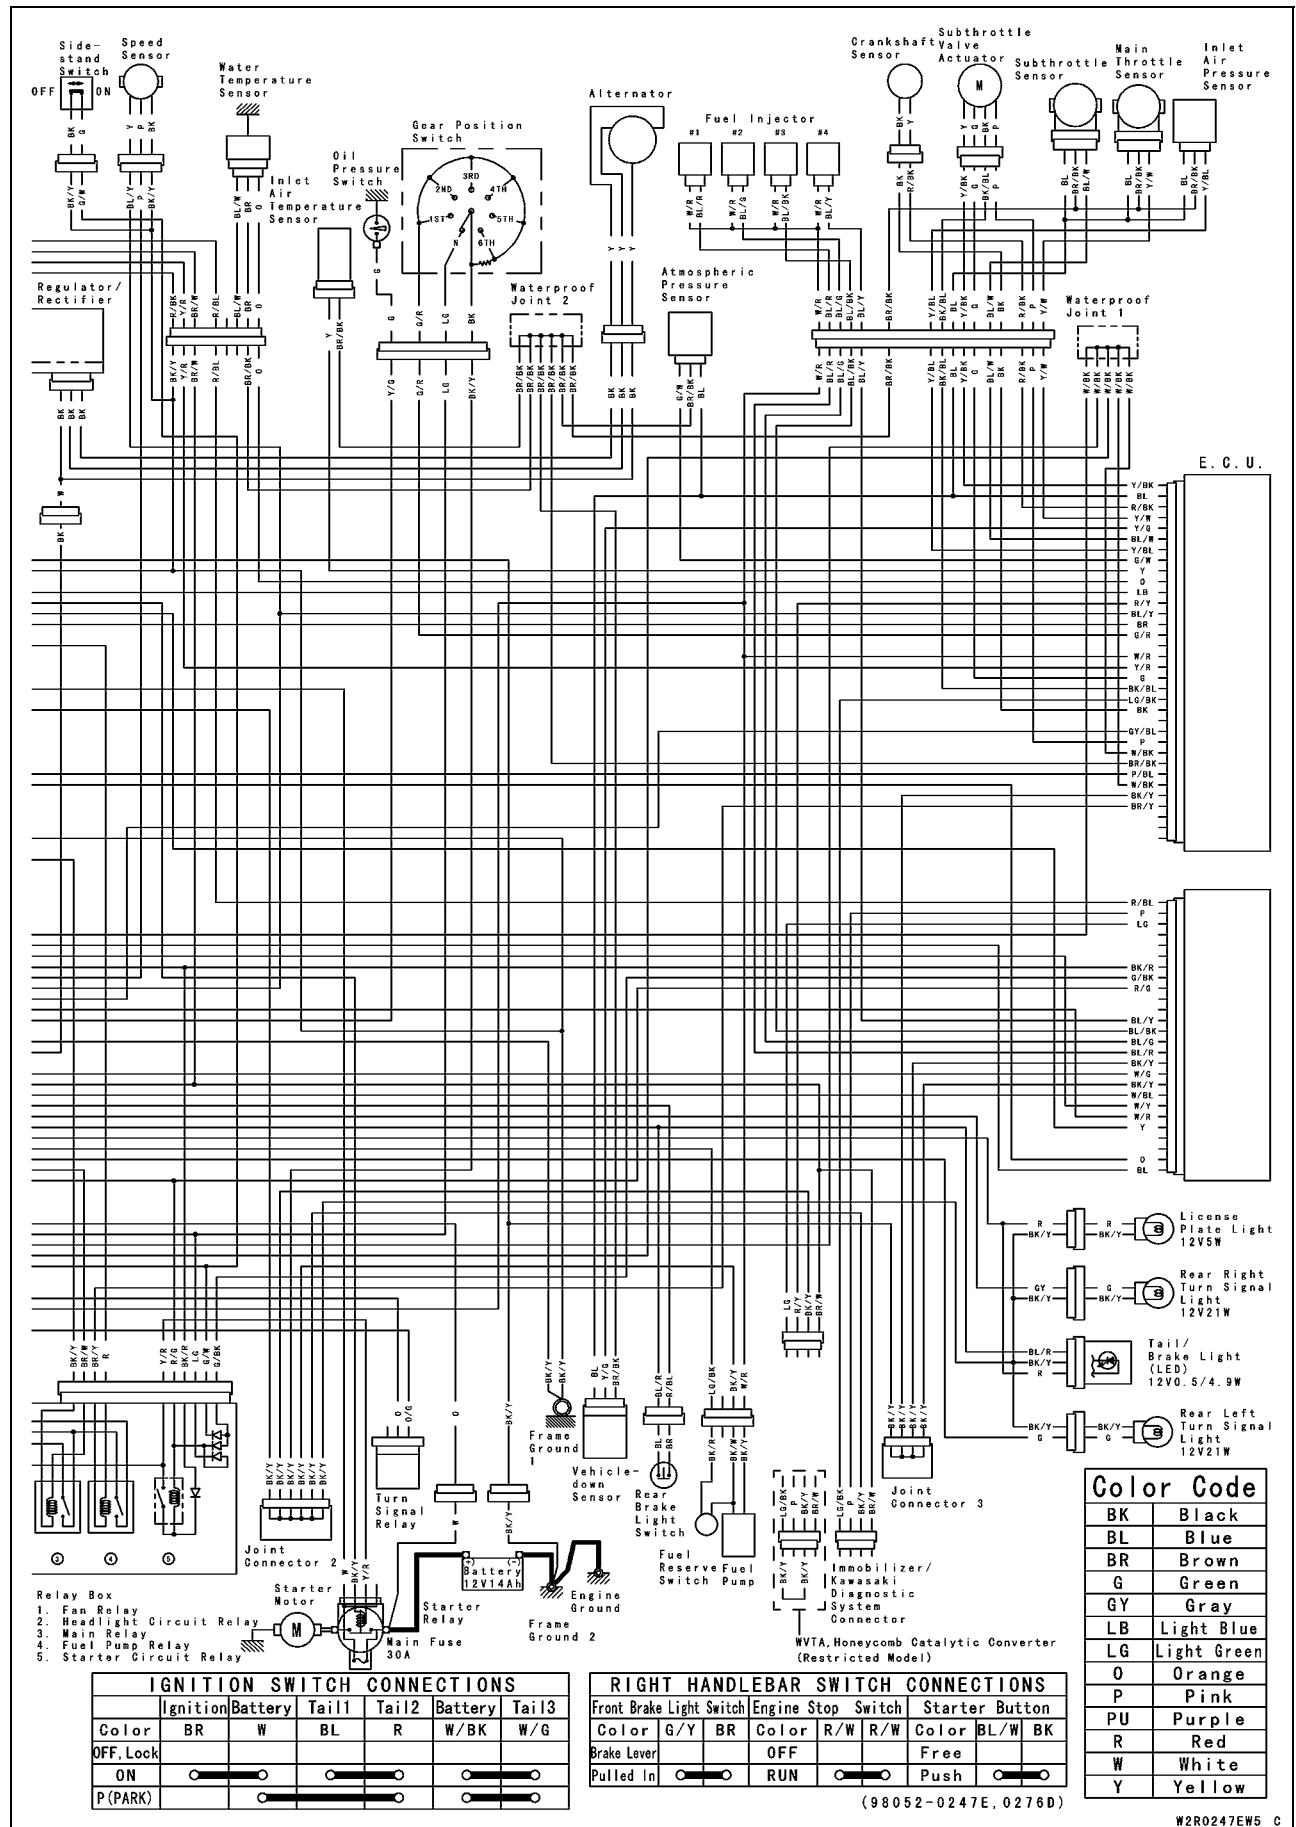

Wiring Diagram (ZX1400B Models)

 

Wiring Diagram (ZX1400B Models)

